


How to Enable TOU in Growatt OSS Management System


Quick guide for installers

1 Step 1 – Find the Device

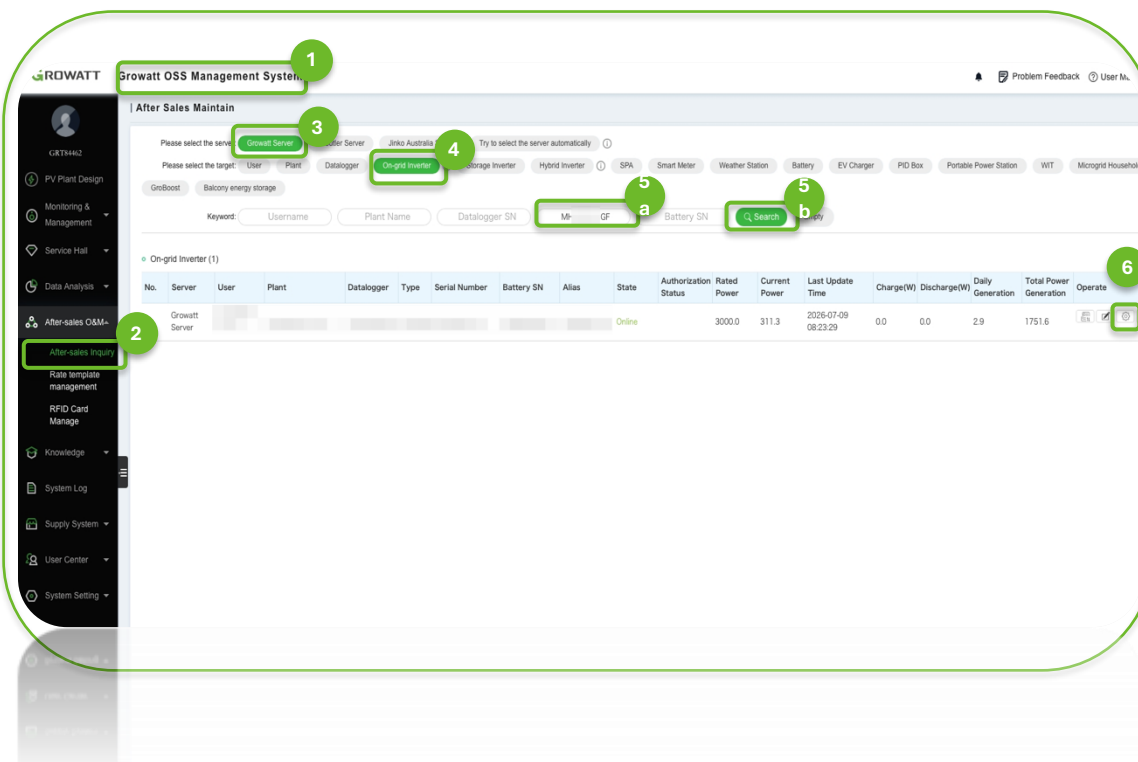

- 1 Open “Growatt OSS Management System”.
- 2 In the left menu, go to “After-sales O&M” > “After-sales Inquiry”.
- 3 Keep the server as “Growatt Server”.
- 4 Select “On-grid Inverter”.
- 5 Enter the “Device SN” and click “Search”.
- 5 a Enter Device SN
- 5 b Click Search
- 6 After the device appears, go to the “Operate” column and click the Settings icon.

2 Step 2 – Enable TOU Setting

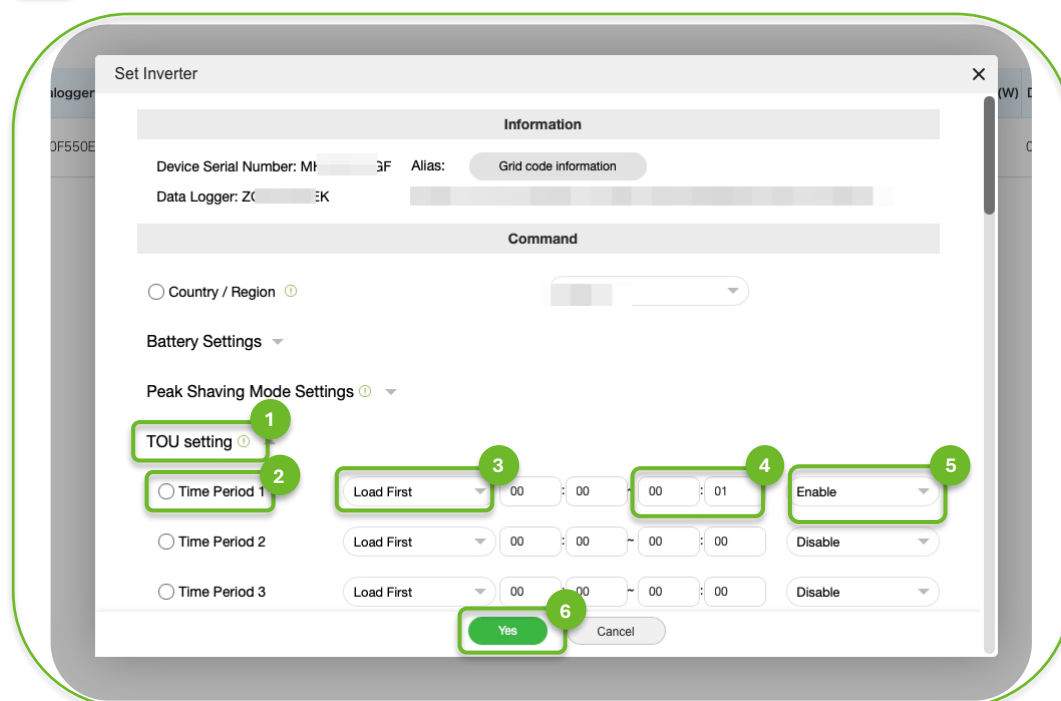

- 1 In the “Set Inverter” window, expand “TOU setting”.
- 2 Enable one time period as an example.
- 3 Set the mode to “Load First”.
- 4 Set the time to “00:00 ~ 00:01” (1 minute).
- 5 Change the status from “Disable” to “Enable”.
- 6 Click “Yes” to save.



Note: “Load First” is the default mode, so using this example setting will not change the inverter’s operating status.